


**58STA/STX
4-WAY MULTIPOISE INDUCED-COMBUSTION
GAS FURNACE**
Input Capacities: 45,000 thru 155,000 Btuh



Turn to the Experts.™

Product Data

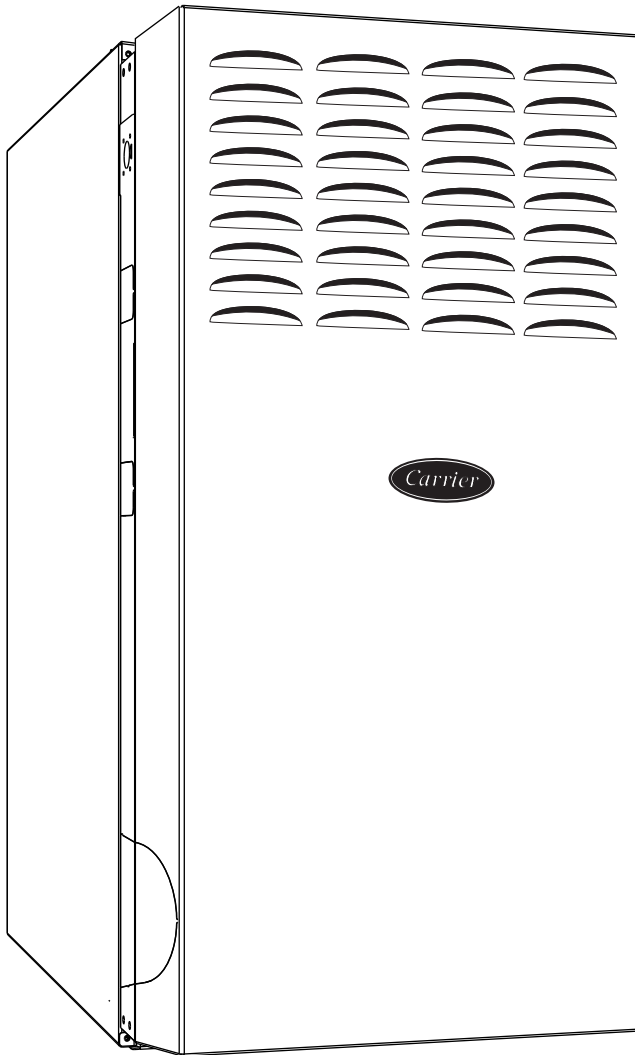


THE CARRIER 58STA/STX GAS FURNACE

The 58STA/STX 4-way Multipoise Gas Furnaces feature Carrier's QuieTech™ noise reduction system for incredibly quiet induced draft operation. Applications are easy with 4-way multipoise design, through-the-furnace downflow venting, 13 different venting options, and a door designed for easy service access. An inner blower door is provided for tighter sealing in sensitive applications. The 58STA/STX furnaces are approved for use with natural or propane gas, and the 58STX is approved for use in Low NOx Air Management Districts.

STANDARD FEATURES

- **QuieTech™ noise reduction system**
- **Microprocessor based control center**
LED diagnostics and self test feature
Adjustable heating air temperature rise
Adjustable cooling airflow
- **4-way Multipoise furnace, 13 vent applications**
- **Compact design - only 33-1/3 in. (847 mm) tall**
- **Power Heat™ Igniter**
- **Draft safeguard switch to ensure proper furnace venting**
- **Inner door for tighter sealing**
- **HYBRID HEAT® Dual Fuel System compatible**
- **All models are chimney friendly when used with accessory vent kit**
- **Twinning in Upflow, Downflow and Horizontal**
- **Residential installations eligible for consumer financing through the Retail Credit Program**


A04039

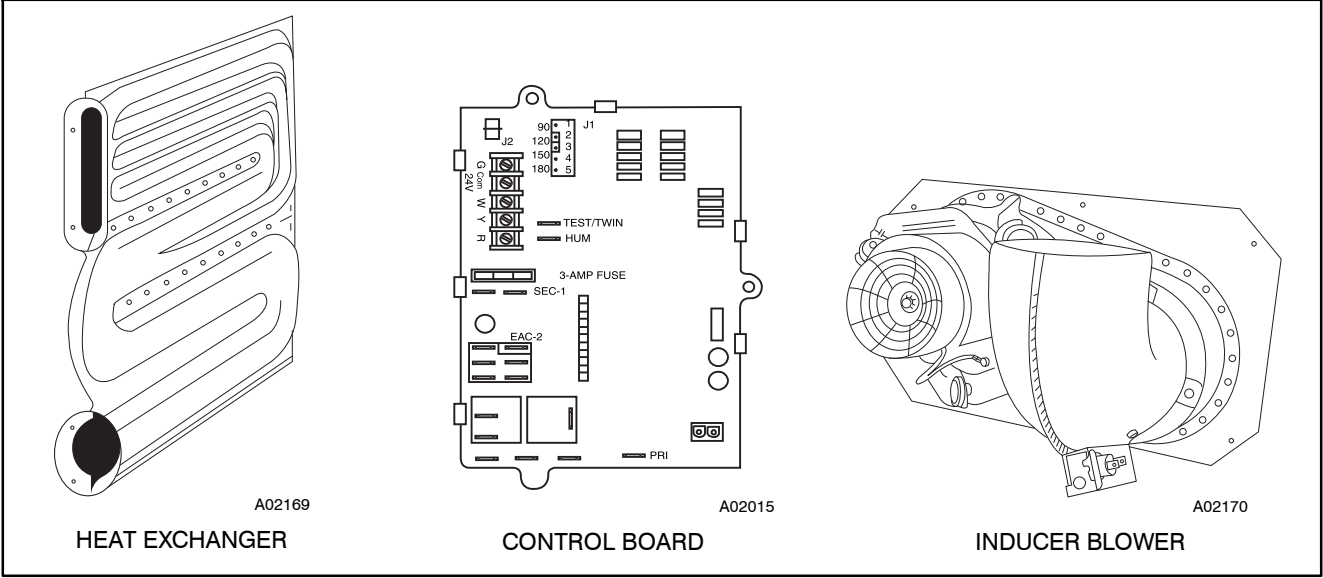

MODEL NUMBER NOMENCLATURE

58STA		045	100	08
58STA 4-Way Multipoise 58STX Low NOx version				Nominal Cooling Size (Airflow at .5 e.s.p.) (400 CFM per 12,000 Btuh) 08–800 CFM 12–1200 CFM 14–1400 CFM 16–1600 CFM 20–2000 CFM 22–2200 CFM
Input Capacity 045–44,000 Btuh 110–110,000 Btuh 070–66,000 Btuh 135–132,000 Btuh 090–88,000 Btuh 155–154,000 Btuh				
			Series Number	

FURNACE COMPONENTS

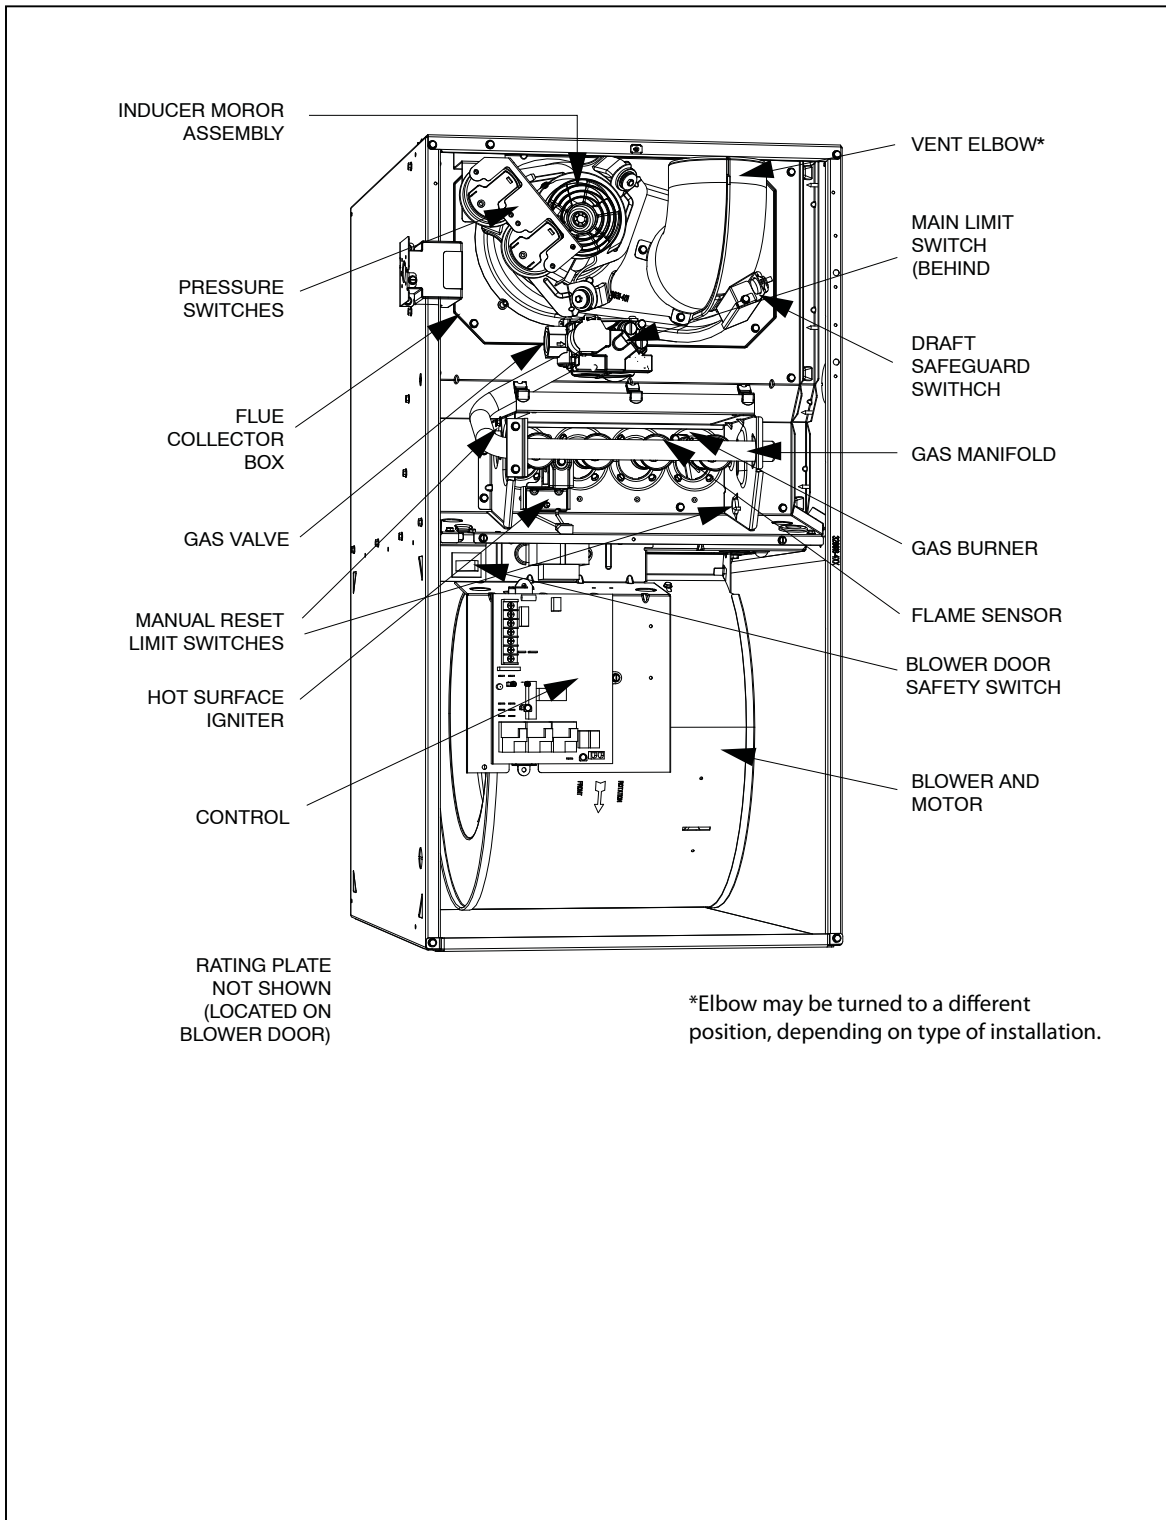


58STA/STX

A04138

NOTE: The 58STA/STX Furnaces are factory shipped for use with natural gas. These furnaces can be field-converted for propane gas with a factory-authorized and listed accessory conversion kit.

CARRIER ACCESSORIES

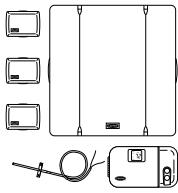


A97432

CONTROLS: THERMOSTATS AND ZONING

Available in programmable and non-programmable models, Carrier thermostats maintain a constant temperature level in the home.


For the ultimate in home comfort, Carrier's 2, 4, and 8-zone systems allow temperature control of individual "zones" of the home. This is accomplished through a series of electronic dampers and remote room sensors. The 4-zone system is shown.

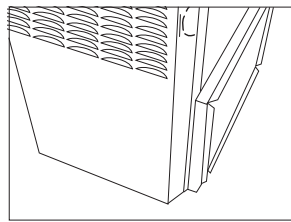

A02121

EXTERNAL FILTER RACK (SIDE OR BOTTOM)

Custom-made filter rack for easy connection when a return plenum already exists. Provides easy access for cleaning filter.

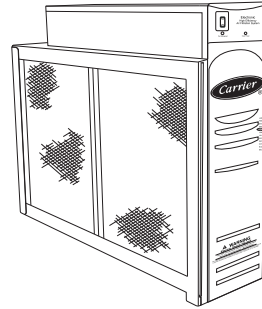


A04008

MECHANICAL OR ELECTRONIC AIR CLEANER

Cleans the air of smoke, dirt, and many pollens commonly found. Saves decorating and cleaning expenses by keeping carpets, furniture, and drapes cleaner.

Electronic air cleaner is shown.

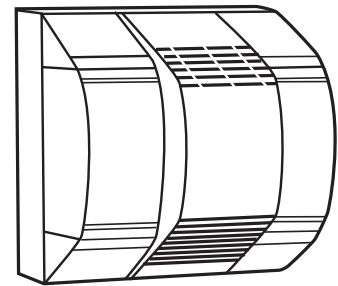

A01484

MODEL HUMCCLFP HUMIDIFIER

By adding moisture to winter-dry air, a Carrier humidifier can often improve comfort and keep furniture, rugs, and draperies in better condition. Moisturizing household air also helps to retain normal body heat and provides comfort at lower temperatures.

58STA/STX

Accessories	
ELECTRONIC AIR CLEANER (EAC)	Model EACB
MECHANICAL AIR CLEANER	Models EZXCAB, FILCAB
HUMIDIFIER	Model HUM
HEAT RECOVERY VENTILATOR	Model HRV
ENERGY RECOVERY VENTILATOR	Model ERV
UV LIGHTS	Model UVL
THERMOSTAT – NON-PROGRAMMABLE	For use with 1-speed Air Conditioner – deg. F/C, Auto Changeover – TP–NAC, TC–NAC
	For use with 1-speed Heat Pump – deg. F/C, Auto Changeover – TP–NHP, TC–NHP*
	For use with 2-speed Air Conditioner – deg. F/C, Auto Changeover – TP–NRH*
	For use with multi-use / stage configurations – deg. F/C, Auto Changeover/Temperature and Humidity Control – TP–PRH†
THERMOSTAT – PROGRAMMABLE	For use with 1-speed Air Conditioner – deg. F/C, Auto Changeover, 7-Day Programmable – TP–PAC
	For use with 1-speed Heat Pump – deg. F/C, Auto Changeover, 7-Day Programmable – TP–PHP*
	For use with 2-speed Air Conditioner – deg. F/C, Auto Changeover, 7-Day Programmable – TP–PRH*
	For use with 1-speed Air Conditioner – deg. F/C, 5–2 Day Programmable – TP–PAC
	For use with multi-stage applications – deg. F/C, Auto Changeover, 7-Day Programmable – TC–PHP‡
	For multi-use / stage configurations – deg. F/C, Auto Changeover, 7-Day Programmable/Temperature and Humidity Control – TP–PRH†
ZONING CONTROL	Comfort™ Series 3-Zone Kit – ZONECC3ZAC01, ZONECC3ZHP01
	2 Performance™ Series ComfortZone™ II Zoning/Temperature and Humidity Control – ZONECC2KIT01–B
	4 Performance™ Series ComfortZone™ II Zoning/Temperature and Humidity Control – ZONECC4KIT01–B
	8 Performance™ Series ComfortZone™ II Zoning/Temperature and Humidity Control – ZONECC8KIT01–B

* Model HP and 2S thermostat must be field converted to air conditioner operation.

† Thermidistat Control can be configured for multiple use and staging, it must be configured for each specific application.

‡ Dual Fuel thermostat is used with furnace and heat pump application.

CARRIER ACCESSORIES

DESCRIPTION 58STA/STX	PART NO.	045-08	045-12	070-08	070-12	070-16	090-14	090-16	090-20	110-12	110-16	110-22	135-16	135-22	155-20
Performance Series Filter Cabinet	FILCABCC0016	X	X	X	X	X	X			X					
	FILCABCC0020							X	X		X	X	X		
	FILCABCC0024													X	X
Cartridge Media Filter	FILCCCAR0016	X	X	X	X	X	X			X					
	FILCCCAR0020							X	X		X	X	X		
	FILCCCAR0024													X	X
EZ Flex Media Filter with End Caps	EXPXXUNV0016	X	X	X	X	X	X			X					
	EXPXXUNV0020							X	X		X	X	X		
	EXPXXUNV0024													X	X
Replacement EZ Flex Filter Media	EXPXXFIL0016	X	X	X	X	X	X			X					
	EXPXXFIL0020							X	X		X	X	X		
	EXPXXFIL0024													X	X
External Bottom Return Filter Rack	KGAFR0401B14	X	X	X	X										
	KGAFR0501B17					X	X			X					
	KGAFR0601B21							X	X		X	X	X		
	KGAFR0701B24													X	X
External Side Return Filter Rack	KGAFR0801SRE	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Unframed Filter 3/4-in. (19 mm)	KGAWF1301UFR†	X	X	X	X	X	X			X					
	KGAWF1401UFR							X	X		X	X	X		
	KGAWF1501UFR													X	X
	KGAWF1306UFR†	X	X	X	X	X	X			X					
	KGAWF1406UFR							X	X		X	X	X		
	KGAWF1506UFR													X	X
Flue Extension	KGAFE0112UPH	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Twinning Kit	KGATW0601HSI	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Combustible Floor Base	KGASB0201ALL	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Downflow Vent Guard	KGAVG0101DFG	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Vent Extension Kit	KGAVE0101DNH	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Chimney Adapter Kit	KGACA02014FC	X	X	X	X	X	X	X	X	X	X	X			
	KGACA02015FC												X	X	X
Natural-to-Propane Conversion Kit*	KGANP4601ALL	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Propane-to-Natural Conversion Kit	KGAPN3901ALL	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Label Kit	KGALB0101KIT	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Air Leakage Kit (Qty 10)	KGBAC0110DGK	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Gas Orifice Kit (Qty 50)	KGAHA0150N42														
	KGAHA0250N43 (factory supplied)														
	KGAHA0350N44														
	KGAHA0450N45														
	KGAHA0550N46														
	KGAHA1550N47														
	KGAHA1650N48														
	KGAHA0650P54														
	KGAHA0750P55														
	KGAHA5750125														
	KGAHA5750130														
KGAHA0850P56															

58STA/STX

See Installation Instructions for model, altitude, and heat value usages.

* Factory-authorized and field installed. Fuel conversion kits are AGA/CGA recognized.
 † Suitable for Side Return Filter Rack (KGAFR0801SRE)

X = Accessory
 S = Standard

PHYSICAL DATA

UNIT SIZE		045		070			090	
		08	12	08	12	16	14	16
OUTPUT CAPACITY BTUH* (Nonweatherized ICS) †	58STX Upflow; all 58STA	35,000	36,000	53,000	54,000	53,000	71,000	71,000
	58STX Downflow/Horizontal	34,000	34,000	51,000	51,000	51,000	68,000	68,000
INPUT BTUH*	58STX Upflow; all 58STA	44,000	44,000	66,000	66,000	66,000	88,000	88,000
	58STX Downflow/Horizontal	42,000	42,000	63,000	63,000	63,000	84,000	84,000
AFUE%*	Nonweatherized ICS	80.0	80.0	80.0	80.0	80.0	80.0	80.0
SHIPPING WEIGHT – LB (KG)		104 (47)	107 (49)	111 (50)	115 (52)	126 (57)	127 (58)	140 (64)
CERTIFIED TEMP RISE RANGE ° F (° C)		30–60 (17–33)	20–50 (11–28)	40–70 (22–39)	30–60 (17–33)	25–55 (14–30)	40–70 (22–39)	30–60 (17–33)
CERTIFIED EXT STATIC PRESSURE	Heating	0.10	0.10	0.12	0.12	0.12	0.15	0.15
	Cooling	0.50	0.50	0.50	0.50	0.50	0.50	0.50
AIRFLOW CFM‡	Heating	920	1250	720	1195	1450	1375	1505
	Cooling	845	1160	900	1200	1530	1385	1720
LIMIT CONTROL		SPST						
HEATING BLOWER CONTROL		Solid-State Time Operation						
BURNERS (Monoport)		2	2	3	3	3	4	4
GAS CONNECTION SIZE		1/2–in. NPT						
GAS VALVE (Redundant) Manufacturer		White-Rodgers						
Minimum Inlet Pressure (In. wc)		4.5 (Natural Gas)						
Maximum Inlet Pressure (In. wc)		13.6 (Natural Gas)						
IGNITION DEVICE		Hot Surface						

* Gas input ratings are certified for elevations to 2000 ft. (610 M). In USA, for elevations above 2000 ft. (605 M), reduce ratings 4 percent for each 1000 ft. (305 M) above sea level. In Canada, derate the unit 10 percent for elevations 2000 to 4500 ft (610 to 1372 M) above sea level. Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1–2006 Table F.1 (d) or furnace Installation Instructions.

† Capacity in accordance with U.S. Government DOE test procedures.

‡ Airflow shown is for bottom only return–air supply. For air delivery above 1800 CFM, see Air Delivery Table for other options. A filter is required for each return-air supply.

ICS — Isolated Combustion System

BLOWER PERFORMANCE DATA

UNIT SIZE	045		070			090	
	08	12	08	12	16	14	16
DIRECT-DRIVE MOTOR Hp (PSC)	1/5	1/3	1/5	1/3	1/2	1/3	1/2
MOTOR FULL LOAD AMPS	2.9	5.2	2.9	5.2	7.9	5.2	7.9
RPM (Nominal)	1075–3	1075–3	1075–3	1075–3	1075–3	1075–3	1075–3
BLOWER WHEEL DIAMETER X WIDTHS – IN. (mm)	10 x 6 (254 x 152)	10 x 6 (254 x 152)	10 x 6 (254 x 152)	10 x 6 (254 x 152)	11 x 8 (279 x 203)	10 x 8 (254 x 203)	10 x 10 (254 x 254)

ECM – Electronically Commutated Motor, Variable Speed

PHYSICAL DATA

UNIT SIZE		090	110				135		155
		20	12	16	22	16	22	20	
OUTPUT CAPACITY BTUH* (Nonweatherized ICS) †	58STX Upflow; all 58STA	71,000	89,000	89,000	89,000	107,000	107,000	125,000	
	58STX Downflow/Horizontal	68,000	85,000	85,000	85,000	102,000	102,000	119,000	
INPUT BTUH*	58STX Upflow; all 58STA	88,000	110,000	110,000	110,000	132,000	132,000	154,000	
	58STX Downflow/Horizontal	84,000	105,000	105,000	105,000	126,000	126,000	147,000	
AFUE%*	Nonweatherized ICS	80.0	80.0	80.0	80.0	80.0	80.0	80.0	
SHIPPING WEIGHT – LB. (KG)		146 (66)	135 (61)	146 (66)	152 (69)	149 (68)	163 (74)	170 (77)	
CERTIFIED TEMP RISE RANGE – °F (°C)		25–55 (14–30)	50–80 (28–44)	40–70 (22–39)	30–60 (17–33)	50–80 (28–44)	40–70 (22–39)	45–75 (25–41)	
CERTIFIED EXT STATIC PRESSURE	Heating	0.15	0.20	0.20	0.20	0.20	0.20	0.20	
	Cooling	0.50	0.50	0.50	0.50	0.50	0.50	0.50	
AIRFLOW CFM‡	Heating	1990	1335	1515	1900	1525	1850	1790	
	Cooling	2025	1355	1680	2220	1710	2110	2230	
LIMIT CONTROL		SPST							
HEATING BLOWER CONTROL		Solid-State Time Operation							
BURNERS (Monoport)		4	5	5	5	6	6	7	
GAS CONNECTION SIZE		1/2–in. NPT							
GAS VALVE (Redundant) Manufacturer		White-Rodgers							
Minimum Inlet Pressure (In. wc)		4.5 (Natural Gas)							
Maximum Inlet Pressure (In. wc)		13.6 (Natural Gas)							
IGNITION DEVICE		Hot Surface							

* Gas input ratings are certified for elevations to 2000 ft. (610 M). In USA, for elevations above 2000 ft. (610 M), reduce ratings 4 percent for each 1000 ft. (305 M) above sea level. In Canada, derate the unit 10 percent for elevations 2000 to 4500 ft. (610 to 1372 M) above sea level. Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1–2006 Table F.1 (d) or furnace Installation Instructions.

† Capacity in accordance with U.S. Government DOE test procedures.

‡ Airflow shown is for bottom only return-air supply. For air delivery above 1800 CFM, see Air Delivery Table for other options. A filter is required for each return-air supply. An airflow reduction of up to 7 percent may occur when using a Carrier 4-5/16 in. (110 mm) high efficiency media filter.


ICS — Isolated Combustion System

58STA/STX

BLOWER PERFORMANCE DATA


UNIT SIZE	090	110				135		155
	20	12	16	22	16	22	20	
DIRECT-DRIVE MOTOR Hp (PSC)	3/4	1/3	1/2	3/4	1/2	3/4	3/4	
MOTOR FULL LOAD AMPS	11.1	5.2	7.9	11.1	7.9	11.1	11.1	
RPM (Nominal) – Speeds	1075–3	1075–3	1075–3	1075–3	1075–3	1075–3	1075–3	
BLOWER WHEEL DIAMETER X WIDTHS – IN. (mm)	11 x 11 (279 x 279)	10 x 8 (254 x 203)	10 x 10 (254 x 254)	11 x 11 (279 x 279)	10 x 10 (254 x 254)	11 x 11 (279 x 279)	11 x 11 (279 x 279)	

PSC—Permanent Split Capacitor

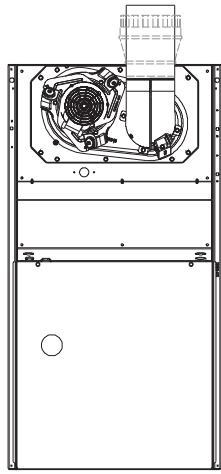


SEE NOTES: 1,2,4,7,8,9
UPFLOW

A02058

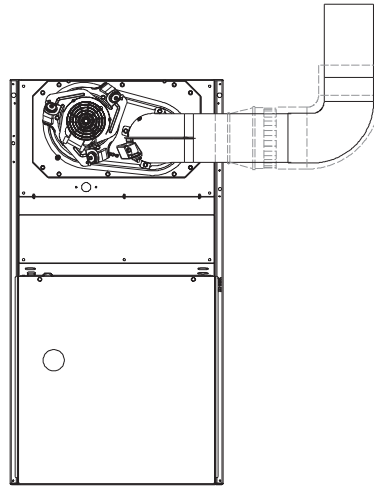


SEE NOTES: 1,2,3,4,7,8,9
UPFLOW

A02059

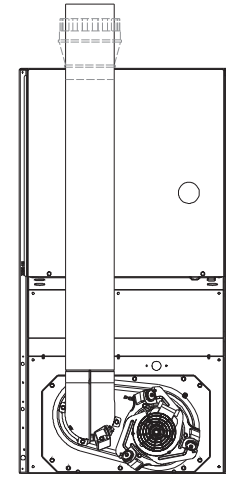


SEE NOTES: 1,2,4,5,7,8,9
DOWNFLOW

A02061

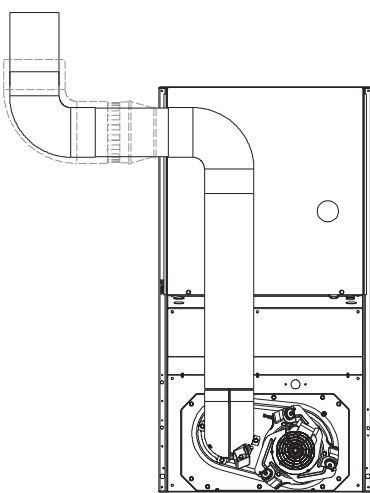


SEE NOTES: 1,2,3,4,5,7,8,9
DOWNFLOW

A02060

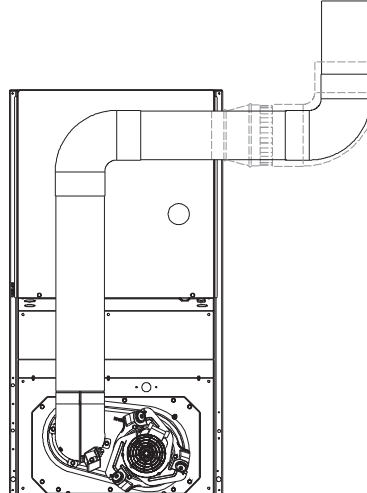

SEE NOTES: 1,2,3,4,5,7,8,9
DOWNFLOW

A02063

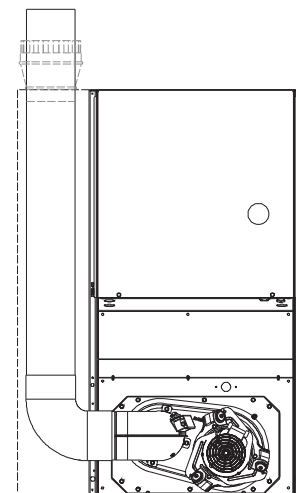


SEE NOTES: 1,2,4,5,6,7,8,9
DOWNFLOW

A02062


Venting Notes

1. For common vent, vent connector sizing and vent material: United States, latest edition of the National Fuel Gas Code (NFGC), ANSI Z223.1/NFPA 54. In Canada, latest edition of the National Standards of Canada, Natural Gas and Propane Installation Code (NSCPGIC), CSA B149.1.
2. Immediately increase to 5-in. (127 mm) vent connector outside furnace casing when 5-in. (127 mm) vent connector required, refer to Note 1.
3. Side outlet vent for upflow and downflow installations must use Type B vent immediately after exiting the furnace, except when KGAVG0101DFG is used in downflow position.
4. Type B vent where required, refer to Note 1.
5. 4-in. (102 mm) single wall vent must be used inside furnace casing and the KGAVG0101DFG Downflow Vent Guard Kit.
6. Accessory Downflow Vent Guard Kit, KGAVG0101DFG required in downflow installations with bottom vent configuration.
7. Chimney Adapter Kit required for exterior masonry chimney applications. Refer to Chimney Adapter Kit, KGACA02014FC and KGACA02015FC for sizing and complete application details.
8. Secure vent connector to furnace elbow with (2) corrosion-resistant sheet metal screws, space approximately 180° apart.
9. Secure all other single wall vent connector joints with (3) corrosion-resistant screws spaced approximately 120° apart. Secure Type B vent connectors per vent connector manufacturer's recommendations.

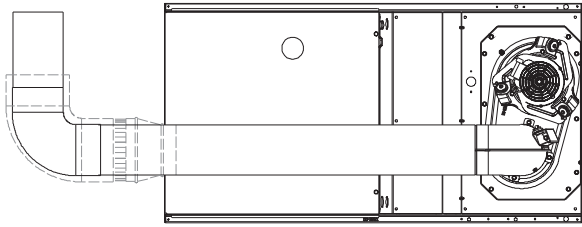


SEE NOTES 1,2,4,5,7,8,9
HORIZONTAL RIGHT

A02068

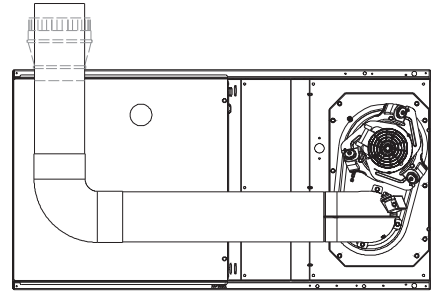


SEE NOTES 1,2,4,5,7,8,9
HORIZONTAL RIGHT

A02070

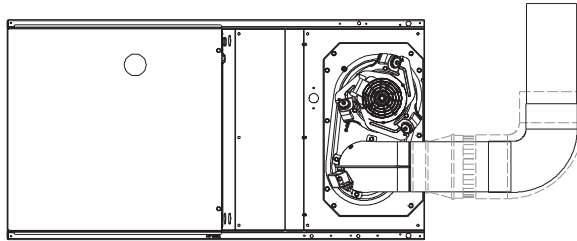


SEE NOTES 1,2,4,7,8,9
HORIZONTAL RIGHT

A02069

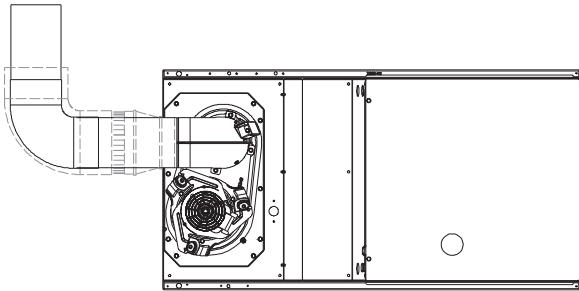


SEE NOTES 1,2,4,7,8,9
HORIZONTAL LEFT

A02064

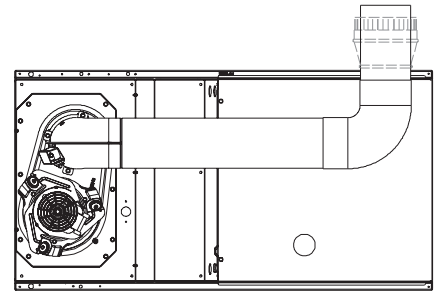


SEE NOTES 1,2,4,5,7,8,9
HORIZONTAL LEFT

A02065

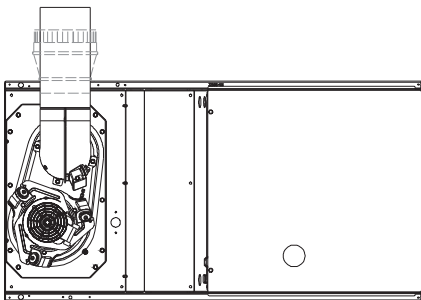

SEE NOTES 1,2,4,5,7,8,9
HORIZONTAL LEFT

A02066

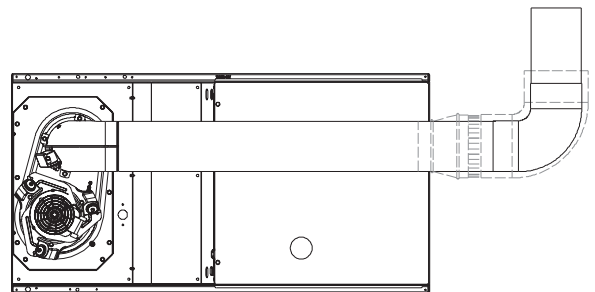

SEE NOTES 1,2,4,5,7,8,9
HORIZONTAL LEFT

A02067

58STA/STX

AIR DELIVERY - CFM (With Filter)


58STA/STX

UNIT SIZE	RETURN-AIR SUPPLY	SPEED	EXTERNAL STATIC PRESSURE (In. wc)									
			0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
045-08	Bottom or Side(s)	High	1085	1035	975	915	845	770	675	565	390	195
		Med-High	920	875	830	770	710	640	555	440	250	—
		Med-Low	820	775	730	680	620	555	470	360	190	—
045-12	Bottom or Side(s) Low	High	1450	1375	1305	1225	1145	1050	955	845	705	510
		Med-High	1360	1300	1240	1175	1115	1040	950	850	725	575
		Med-Low	1250	1210	1160	1100	1040	965	885	790	670	520
070-08	Bottom or Side(s)	High	1030	1010	980	945	900	845	775	680	490	335
		Med-High	835	815	790	760	720	675	610	490	375	265
		Med-Low	725	700	675	645	600	555	475	390	300	—
070-12	Bottom or Side(s)	High	1425	1375	1320	1265	1200	1125	1035	940	830	655
		Med-High	1320	1280	1240	1205	1140	1075	995	905	790	620
		Med-Low	1200	1175	1145	1105	1050	990	920	840	725	555
070-16	Bottom or Side(s)	High	1805	1740	1670	1600	1530	1445	1360	1280	1180	1075
		Med-High	1630	1585	1530	1470	1405	1330	1255	1170	1080	990
		Med-Low	1460	1420	1385	1325	1280	1220	1155	1080	995	910
090-14	Bottom or Side(s)	High	1650	1600	1535	1465	1385	1285	1175	1055	895	645
		Med-High	1515	1485	1440	1380	1300	1220	1115	990	830	600
		Med-Low	1385	1360	1320	1260	1195	1120	1025	915	710	565
090-16	Bottom or Side(s)	High	2060	1985	1915	1820	1720	1610	1490	1340	1135	925
		Med-High	1790	1765	1715	1645	1560	1470	1345	1195	1010	820
		Med-Low	1505	1505	1480	1440	1375	1300	1190	1045	890	740
090-20	Bottom Only	High	2405	2310	2220	2130	2025	1920	1790	1660	1530	1350
		Med-High	2225	2155	2080	1995	1895	1785	1675	1565	1420	1260
		Med-Low	2020	1955	1880	1805	1730	1630	1535	1420	1275	1135
	Both Sides or 1 Side & Bottom	High	2530	2450	2365	2270	2165	2065	1940	1805	1670	1505
		Med-High	2285	2215	2150	2075	1985	1890	1780	1660	1525	1360
		Med-Low	1995	1945	1900	1840	1770	1685	1600	1480	1350	1180
	1 Side Only	High	2475	2395	2300	2200	2090	1985	1865	1730	1585	1425
		Med-High	2260	2190	2110	2035	1940	1845	1735	1620	1475	1325
		Med-Low	1950	1910	1855	1795	1730	1650	1555	1445	1310	1150
110-12	Bottom or 1 Side(s)	High	1625	1575	1515	1445	1355	1260	1165	990	785	—
		Med-High	1510	1470	1415	1355	1285	1185	1070	890	725	—
		Med-Low	1360	1335	1295	1250	1180	1100	985	810	—	—
110-16	Bottom or 1 Side	High	2035	1965	1880	1790	1680	1495	1365	1215	1075	875
		Med-High	1745	1710	1650	1560	1450	1340	1205	1090	955	750
		Med-Low	1530	1515	1470	1400	1310	1215	1095	990	830	670
110-22	Bottom Only	High	2530	2470	2400	2320	2220	2115	2000	1865	1730	1590
		Med-High	2230	2205	2165	2110	2035	1950	1855	1740	1615	1485
		Med-Low	1920	1900	1880	1845	1795	1730	1650	1555	1460	1340
	Both Sides or 1 Side & Bottom	High	—	—	2415	2350	2250	2145	2015	1875	1715	1560
		Med-High	2235	2200	2155	2100	2040	1955	1850	1740	1595	1470
		Med-Low	—	—	—	—	—	—	—	—	—	—
	1 Side Only	High	2540	2495	2430	2355	2265	2175	2065	1935	1785	1650
		Med-High	2125	2120	2105	2060	2010	1940	1840	1730	1615	1485
		Med-Low	1790	1795	1790	1765	1720	1650	1585	1500	1390	1280
135-16	Bottom or 1 Side	High	2090	2010	1930	1835	1710	1590	1470	1335	1025	835
		Med-High	1790	1755	1705	1640	1550	1465	1360	1210	945	785
		Med-Low	1545	1525	1500	1450	1380	1315	1215	1005	855	670
135-22	Bottom Only	High	2485	2400	2310	2215	2110	2000	1880	1725	1535	1355
		Med-High	2195	2150	2090	2000	1920	1825	1720	1565	1405	1255
		Med-Low	1880	1850	1820	1780	1715	1635	1540	1415	1290	1160
	Both Sides or 1 Side & Bottom	High	—	—	2385	2305	2195	2085	1960	1825	1670	1465
		Med-High	2180	2145	2060	2010	1945	1865	1765	1660	1515	1325
		Med-Low	—	—	—	—	—	—	—	—	—	—
	1 Side Only	High	—	—	2245	2155	2055	1940	1825	1695	1555	1385
		Med-High	2135	2085	2035	1975	1895	1795	1685	1565	1445	1265
		Med-Low	1880	1850	1820	1780	1715	1635	1540	1415	1290	1160
155-20	Bottom Only	High	2465	2430	2375	2305	2230	2110	2000	1865	1725	1545
		Med-High	2115	2105	2075	2030	1980	1910	1830	1725	1590	1425
		Med-Low	1800	1790	1770	1735	1695	1640	1570	1465	1345	1225
	Both Sides or 1 Side & Bottom	High	—	—	2375	2285	2200	2105	1995	1870	1730	1570
		Med-High	2155	2135	2095	2040	1975	1895	1790	1685	1550	1400
		Med-Low	—	—	—	—	—	—	—	—	—	—
	1 Side Only	High	—	—	2260	2180	2085	1975	1865	1740	1605	1455
		Med-High	2140	2095	2040	1975	1890	1810	1705	1595	1480	1325
		Med-Low	1800	1790	1770	1735	1695	1640	1570	1465	1345	1225

* A filter is required for each return-air supply. Airflow performance includes 3/4-in. (19 mm) washable filter media such as contained in factory-authorized accessory filter rack. To determine airflow performance without this filter, assume an additional .1 available external static pressure.

— Indicates unstable operating conditions.

DIMENSIONS

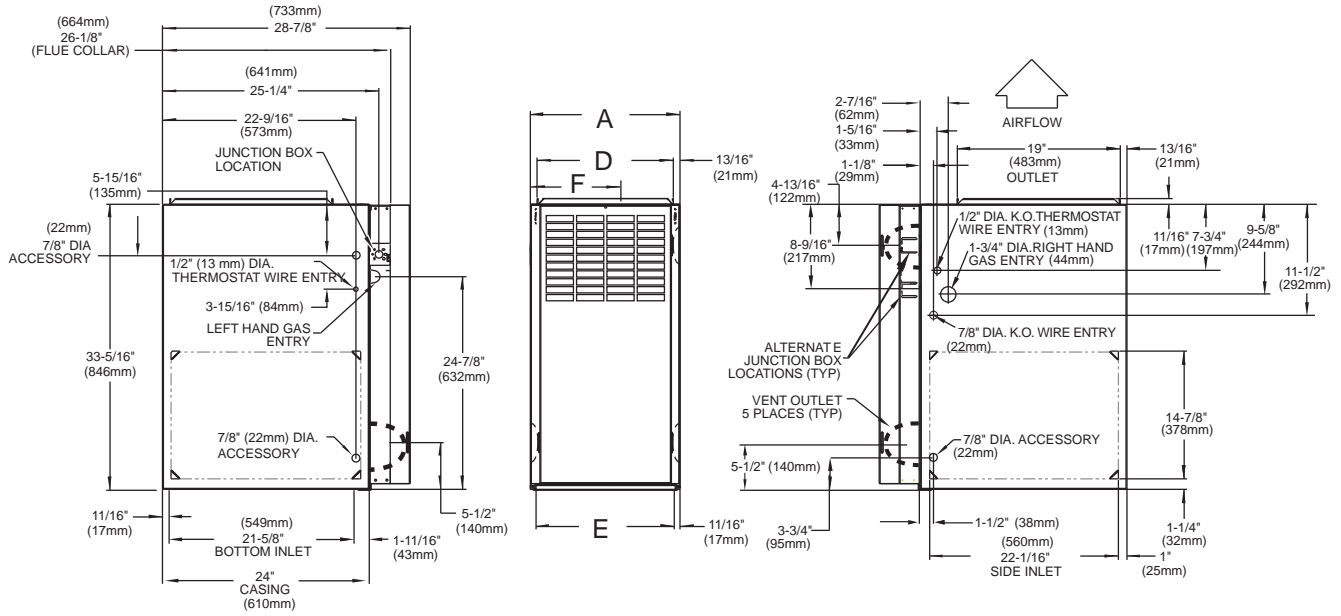

A04037

NOTES:

1. Two additional 7/8-in. (22 mm) diameter holes are located in the top plate.
2. Minimum return-air openings at furnace, based on metal duct. If flex duct is used, see flex duct manufacturer's recommendations for equivalent diameters.
 - a. For 800 CFM—16-in. (406 mm) round or 14 1/2 x 12-in. (368 x 305 mm) rectangle.
 - b. For 1200 CFM—20-in. (508 mm) round or 14 1/2 x 19 1/2-in. (368 x 495 mm) rectangle.
 - c. For 1600 CFM—22-in. (559 mm) round or 14 1/2 x 22 1/16-in. (368 x 560mm) rectangle.
 - d. For airflow requirements above 1800 CFM, see Air Delivery table in Product Data literature for specific use of single side inlets. The use of both side inlets, a combination of 1 side and the bottom, or the bottom only will ensure adequate return air openings for airflow requirements above 1800 CFM.

FURNACE SIZE	A CABINET WIDTH IN (mm)	D SUPPLY-AIR WIDTH IN (mm)	E RETURN-AIR WIDTH IN (mm)	F CENTER LINE TOP AND BOTTOM FLUE COLLAR IN (mm)	FLUE COLLAR* IN (mm)	SHIP WEIGHT LB (KG)
045-08	14-3/16 (360)	12-9/16 (319)	12-11/16 (322)	9-5/16 (237)	4 (102)	104 (47)
045-12	14-3/16 (360)	12-9/16 (319)	12-11/16 (322)	9-5/16 (237)	4 (102)	107 (48)
070-08	14-3/16 (360)	12-9/16 (319)	12-11/16 (322)	9-5/16 (237)	4 (102)	111 (50)
070-12	14-3/16 (360)	12-9/16 (319)	12-11/16 (322)	9-5/16 (237)	4 (102)	115 (52)
070-16	17-1/2 (445)	15-7/8 (403)	16-1/8 (410)	11-9/16 (294)	4 (102)	126 (57)
090-14	17-1/2 (445)	15-7/8 (403)	16-1/8 (410)	11-9/16 (294)	4 (102)	127 (58)
090-16	21 (533)	19-3/8 (492)	19-1/2 (495)	13-5/16 (338)	4 (102)	140 (64)
090-20	21 (533)	19-3/8 (492)	19-1/2 (495)	13-5/16 (338)	4 (102)	146 (66)
110-12	17-1/2 (445)	15-7/8 (403)	16-1/8 (410)	11-9/16 (294)	4 (102)	135 (61)
110-16	21 (533)	19-3/8 (492)	19-1/2 (495)	13-5/16 (338)	4 (102)	146 (66)
110-22	21 (533)	19-3/8 (492)	19-1/2 (495)	13-5/16 (338)	4 (102)	152 (69)
135-16	21 (533)	19-3/8 (492)	19-1/2 (495)	13-5/16 (338)	4 (102)†	149 (68)
135-22	24-1/2 (622)	22-7/8 (581)	23 (584)	15-1/16 (383)	4 (102)†	163 (74)
155-20	24-1/2 (622)	22-7/8 (581)	23 (584)	15-1/16 (383)	4 (102)†	170 (77)

*5-in. or 6-in. (127 or 152 mm) vent connector may be required in some cases.

†135 and 155 size furnaces require 5-in (127 mm) vents. Use a 4 - 5-in. (102-127 mm) vent adapter between furnace and vent stack. See Installation Instructions for complete installation requirements.

58STA/STX

58STA/STX

WARNING

AVERTISSEMENT

**FIRE, EXPLOSION, ASPHYXIATION HAZARD
RISQUE D'INCENDIE, D'EXPLOSION ET ASPHYXIE**

Improper adjustment, alteration, service, maintenance, or installation can cause serious injury or death.

Read and follow instructions and precautions in User's Information Manual provided with this furnace. Installation and service must be performed by a qualified service agency or the gas supplier.

Une réglage, une modification, un réparation, un entretien ou une installation incorrect puet entraîner des blessures graves ou la mort.

Suivre les instructions et les consignes qui figurent dans la notice d'utilisation qui accompagne ce générateur d'air chaud. L'installation et l'entretien doivent être effectués par un réparateur qualifié ou par le fournisseur de gaz.

CAUTION

MISE EN GARDE

Check entire gas assembly for leaks after lighting this appliance.

Vérifier tous les éléments à gaz pour rechercher les fuites après avoir allumé cet appareil.

INSTALLATION

1. This furnace must be installed in accordance with the manufacturer's instructions and local codes. In the absence of local codes, follow the National Fuel Gas Code ANSI Z223.1 / NFPA54 or CSA B-149.1 Gas Installation Code.

Ce fournaise à air chaud doit être installé conformément aux instructions du fabricant et aux codes locaux. En l'absence de ces derniers, la norme ANSI Z223.1/NFPA54 intitulée National Fuel Gas Code ou les code d'installation CSA B149.1.

2. This furnace must be installed so there are provisions for combustion and ventilation air. See manufacturer's installation information provided with this appliance.

Ce fournaise à air chaud doit être installé de manière à ce qu'il y ait ait suffisamment d'air de ventilation et combustion. Consulter les instructions d'installation du fabricant fournies avec cet appareil.

OPERATION

This furnace is equipped with manual reset limit switch(es) in burner compartment to protect against overheating conditions that can result from inadequate combustion air supply or blocked vent conditions.

1. Do not bypass limit switches.
2. If a limit opens, call a qualified serviceman to correct the condition and reset limit switch.

INSTALLATION

**MINIMUM INCHES CLEARANCE TO COMBUSTIBLE CONSTRUCTION
DISTANCE MINIMALE EN POUCES AUX CONSTRUCTIONS COMBUSTIBLES**

This forced air furnace is equipped for use with natural gas at altitudes 0-10,000 ft (0-3,050m). An accessory kit, supplied by the manufacturer, shall be used to convert to propane gas use or may be required for some natural gas applications.

This furnace is for indoor installation in a building constructed on site. This furnace may be installed on combustible flooring in alcove or closet at minimum clearance as indicated by the diagram from combustible material.

This furnace may be used with a Type B-1 Vent and may be vented in common with other gas fired appliances.

Cette fournaise à air pulsé est équipée pour utilisation avec gaz naturel et altitudes comprises entre 0-3,050m (0-10,000 pi). Utiliser une trousse de conversion, fournie par le fabricant, pour passer au gaz propane ou pour certaines installations au gaz naturel.


Cette fournaise est prévue pour être installée dans un bâtiment construit sur place. Cette fournaise peut être installée sur un plancher combustible dans une alcôve ou dans un garde-robe en respectant le minimum d'espace libre des matériaux combustibles, tel qu'indiqué sur le diagramme.

Cette fournaise peut être utilisée avec un conduit d'évacuation de Type B-1 ou connectée au conduit ommun d'autres appareils à gaz.

This furnace is approved for UPFLOW, DOWNFLOW, and HORIZONTAL installations.

Cette fournaise est approuvée pour l'installation HORIZONTALE et la circulation d'air VERS LE HAUT et VERS LE BAS.

Clearance arrows do not change with furnace orientation. Les flèches de dégagement ne change pas avec l'orientation de la fournaise.

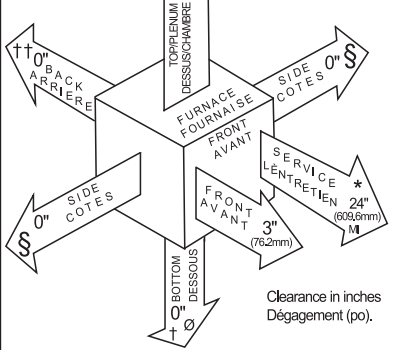

Vent Clearance to combustibles:
 For Single Wall vents 6 inches (6 po).
 For Type B-1 vent type 1 inch (1 po).
 Dégagement de l'évent avec combustibles:
 Pour conduit d'évacuation à paroi simple 6 po (6 inches).
 Pour conduit d'évacuation de Type B-1 1 po (1 inch).

MINIMUM INCHES CLEARANCE TO COMBUSTIBLE CONSTRUCTION

- DOWNFLOW POSITIONS:**
- † Installation on non-combustible floors only.
 - For Installation on combustible flooring only when installed on special base, Part No. KGASB0201ALL or NAHA01101SB, Coil Assembly, Part No. CAR, CAP, CNPV, CNRV, WENC or WTNCC.
 - Ø 18 inches front clearance required for alcove.
 - * Indicates supply or return sides when furnace is in the horizontal position. Line contact only permissible between lines formed by intersections of the Top and two Sides of the furnace jacket, and building joists, studs or framing.

DÉGAGEMENT MINIMUM EN POUCES AVEC ÉLÉMENTS DE CONSTRUCTION COMBUSTIBLES

- POUR LA POSITION COURANT DESCENDANT:**
- † Pour l'installation sur plancher non combustible seulement.
 - Pour l'installation sur un plancher combustible seulement quand on utilise la base spéciale, pièce n° KGASB0201ALL ou NAHA01101SB, l'ensemble serpentin, pièce n° CAR, CAP, CNPV, CNRV, WENC ou WTNCC, ou le carter de serpentin.
 - Ø Dans une alcôve, on doit maintenir un dégagement à l'avant de 18 po (450mm).
 - * La position indiquée concerne le côté d'entrée ou de retour quand la fournaise est dans la position horizontale.
- Le contact n'est permis qu'entre les lignes formées par les intersections du dessus et des deux côtés de la chemise de la fournaise et les solives, montant sous cadre de charpente.

335137-101 REV. A

A08471




ISO 9001:2000



MEETS DOE RESIDENTIAL CONSERVATION SERVICES PROGRAM STANDARDS.

Before purchasing this appliance, read important energy cost and efficiency information available from your retailer.

TYPICAL WIRING SCHEMATIC

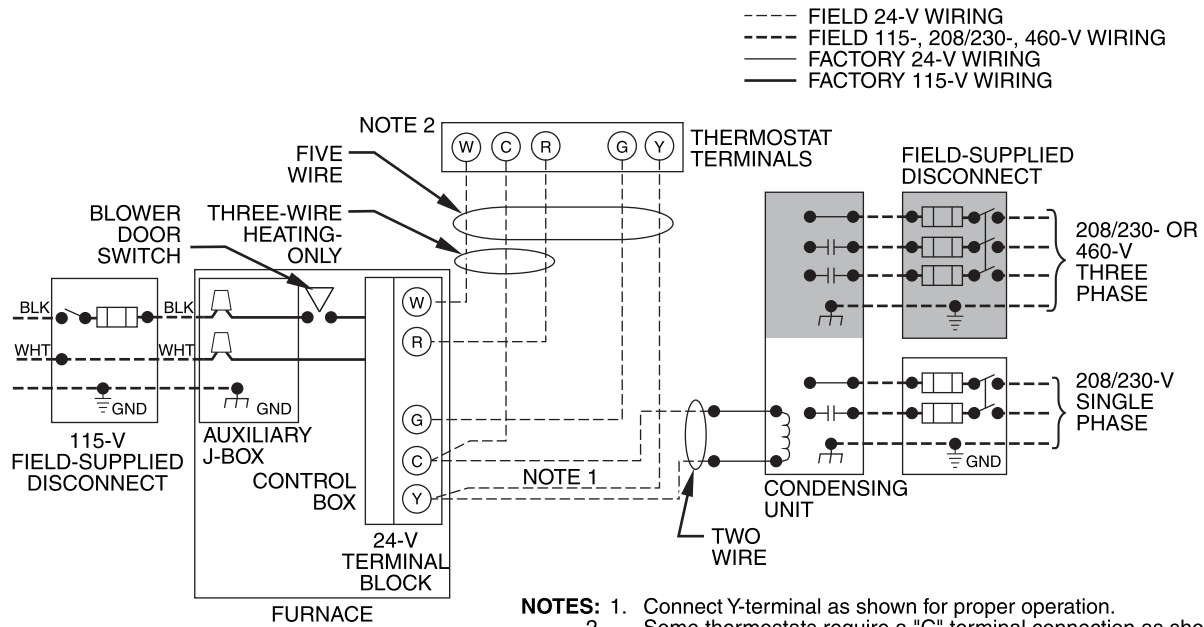

- NOTES:**
1. Connect Y-terminal as shown for proper operation.
 2. Some thermostats require a "C" terminal connection as shown.
 3. If any of the original wire, as supplied, must be replaced, use same type or equivalent wire.

A02186

58STA/STX

ELECTRICAL DATA

58STA/STX UNIT SIZE	VOLTS HERTZ PHASE	OPERATING VOLTAGE RANGE		MAXIMUM UNIT AMPS	MAXIMUM WIRE LENGTH FT (M)‡	MAXIMUM FUSE OR CKT BKR AMPS†	MINIMUM WIRE GAGE
		Maximum*	Minimum*				
045-08	115-60-1	127	104	5.4	49 (14.9)	15	14
045-12	115-60-1	127	104	7.0	39 (11.8)	15	14
070-08	115-60-1	127	104	5.0	52 (15.8)	15	14
070-12	115-60-1	127	104	6.8	40 (12.1)	15	14
070-16	115-60-1	127	104	9.5	29 (8.8)	15	14
090-14	115-60-1	127	104	8.2	34 (10.3)	15	14
090-16	115-60-1	127	104	10.0	28 (8.5)	15	14
090-20	115-60-1	127	104	13.6	32 (9.7)	20	12
110-12	115-60-1	127	104	8.2	34 (10.3)	15	14
110-16	115-60-1	127	104	10.1	28 (8.5)	15	14
110-22	115-60-1	127	104	14.8	30 (9.1)	20	12
135-16	115-60-1	127	104	10.2	27 (8.2)	15	14
135-22	115-60-1	127	104	14.4	30 (9.1)	20	12
155-20	115-60-1	127	104	15.0	29 (8.8)	20	12


* Permissible limits of the voltage range at which unit operates satisfactorily.

† Time – delay type is recommended.

‡ Length shown is as measured 1 way along wire path between unit and service panel for maximum 2 percent voltage drop.

TYPICAL INSTALLATION

58STA/STX

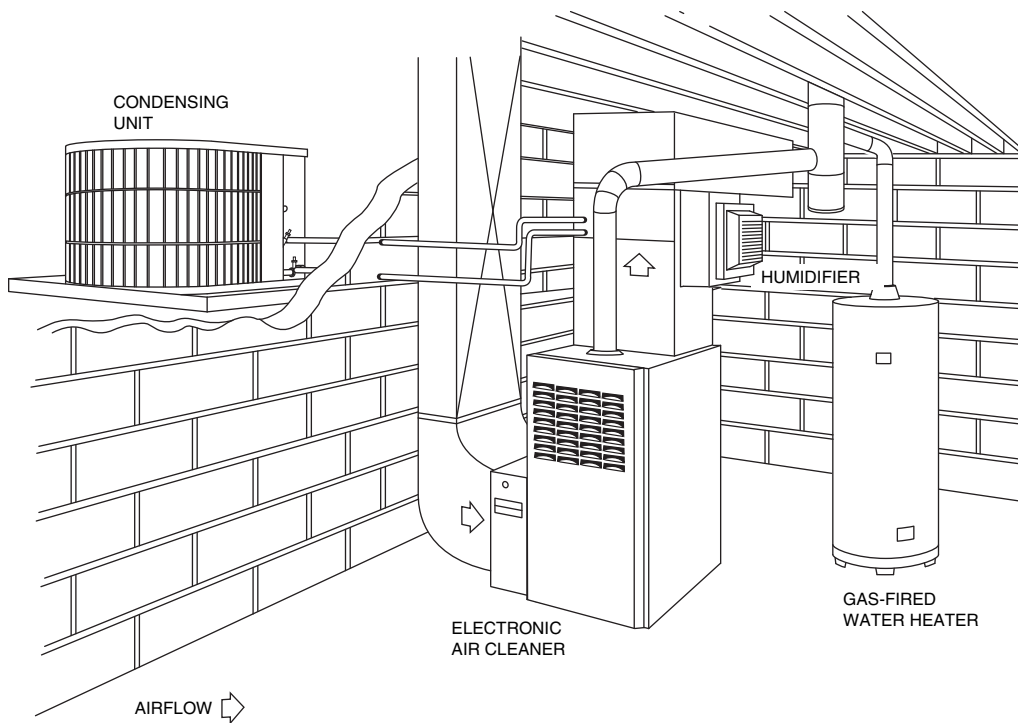

A02184

GUIDE SPECIFICATIONS

Gas Furnace

58STA/STX

General

SYSTEM DESCRIPTION

Furnish a _____ fixed capacity gas-fired furnace for use with natural gas or propane (factory authorized conversion kit required for propane); furnish cold air return plenum; furnish external medial cabinet for use with accessory media filter or standard filter.

QUALITY ASSURANCE

Unit will be designed, tested and constructed to the current ANSI Z 21.47/CSA 2.3 design standard for gas-fired central furnaces.

Unit will be 3rd party certified by CSA to the current ANSI Z 21.47/CSA 2.3 design standard for gas-fired central furnaces.

Unit will carry the CSA Blue Star® and Blue Flame® labels.

Unit efficiency testing will be performed per the current DOE test procedure as listed in the Federal Register.

Unit will be certified for capacity and efficiency and listed in the latest GAMA Consumer's Directory of Certified Efficiency Ratings.

Unit shall carry the current Federal Trade Commission Energy Guide efficiency label.

DELIVERY, STORAGE AND HANDLING

Unit shall be shipped as single package only and is stored and handled per unit manufacturer's recommendations.

WARRANTY (for inclusion by specifying engineer)

U.S. and Canada only. Warranty certificate available upon request.

Products

EQUIPMENT

Components shall include: slow-opening gas valve to reduce ignition noise, regulate gas flow, with electric switch gas shut-off; flame proving sensor, hot surface igniter, pressure switch assembly, flame rollout switch, blower and inducer assembly, 40va transformer; low-voltage (heating) (heating/cooling) thermostat.

Blower Wheel and Blower Motor

Galvanized blower wheel shall be centrifugal type, statically and dynamically balanced. Blower motor of PSC type shall be permanently lubricated with sealed bearings, of _____hp, and shall be multiple-speed direct drive. Blower motor shall be soft mounted to the blower scroll to reduce vibration transmission.

Filters

Furnace may have reusable-type filters. Filter shall be _____ in. (mm) (x) _____ in. (mm). An accessory

high efficiency Media Filter is available as an option. _____ Media Filter.

Casing

Casing shall be of .030 in. (.76) thickness minimum, pre-painted galvanized steel.

Inducer Motor

Inducer motor shall be soft mounted to reduce vibration transmission.

Draft Safeguard Switch

Draft Safeguard Switch (blocked vent safeguard) shall be factory installed to reduce the possibility of vent gas infiltration due to a blocked or restricted vent pipe.

Heat Exchangers

Heat exchangers shall be a 4-Pass 20 gage aluminized steel of fold-and-crimp sectional design when applied operating under negative pressure.

Controls

Control shall include a micro-processor based integrated electronic control board with at least 11 service troubleshooting codes displayed via diagnostic flashing LED light on the control, a self-test feature that checks all major functions of the furnace within one minute, and a replaceable automotive-type circuit protection fuse. Multiple operational settings available including, separate blower speeds for heating, cooling and continuous fan. Continuous fan speed may be adjusted from the thermostat. Cooling airflow will be selectable between 350 or 400 CFM per ton of air conditioning.

OPERATING CHARACTERISTICS

Heating Capacity shall be _____ Btuh input; _____ Btuh output capacity.

Fuel Gas Efficiency shall be 80% AFUE. Air delivery shall be _____ cfm minimum at 0.50 in. wc external static pressure.

Dimensions shall be: depth _____ in. (mm); width _____ in. (mm); height _____ in. (mm) (casing only). Height shall be _____ in. (mm) with A/C coil and _____ in. (mm) overall with plenum.

ELECTRICAL REQUIREMENTS

Electrical supply shall be 115 volts, 60 Hz, single-phase (nominal). Minimum wire size shall be _____AWG; maximum fuse size or circuit breaker shall be _____Amps.

SPECIAL FEATURES

Refer to section of the product data sheet identifying accessories and descriptions for specific features and available enhancements.